


Thank you for purchasing the HAKKO FR-801 SMD rework station.  
Please read this manual before operating the HAKKO FR-801.  
Keep this manual readily accessible for reference.

### 1. PACKING LIST AND PART NAMES

Please check to make sure that all items listed below are included in the package.

HAKKO FR-801 station	1
Power cord	1
Handpiece holder	1
FP pick-up	1
FP pick-up wire (S)	1
FP pick-up wire (L)	1
Instruction manual	1

\* This product does not include a nozzle. A large selection of nozzles is available for the HAKKO FR-801. Select the nozzle or nozzles suitable for the work to be performed.

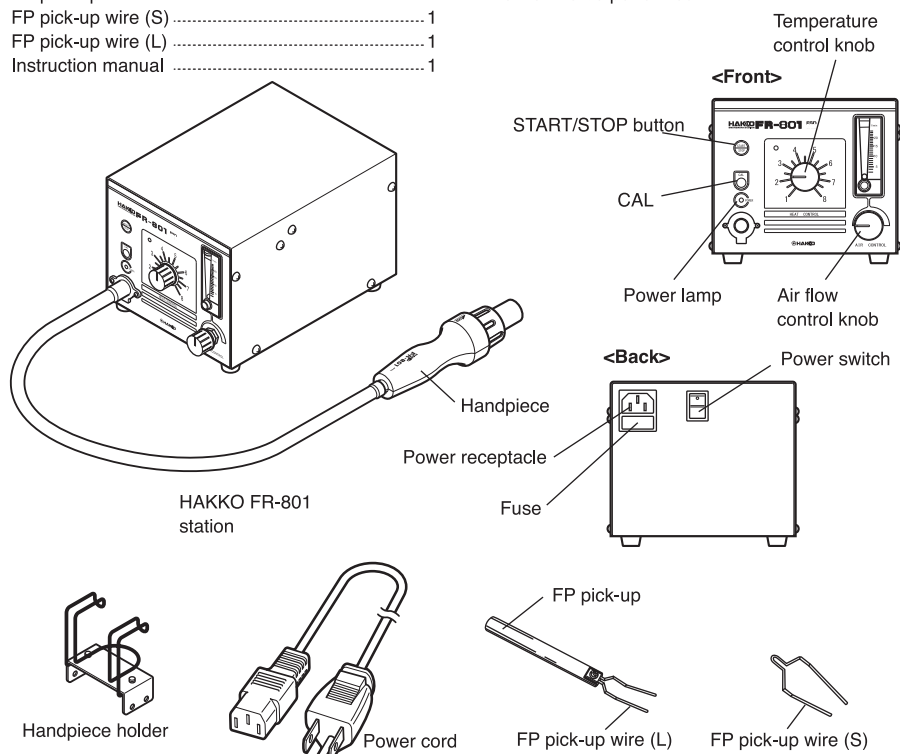

### 2. SPECIFICATIONS

Name	HAKKO FR-801
Power consumption	100V - 310W 110V - 360W 120V - 430W 220V - 570W 230V - 630W 240V - 680W

#### ● Station

Power Consumption	30 W (Stand-by power consumption 100 - 120V 4W, 220 - 240V 7W)
Pump	Diaphragm pump
Capacity	5 - 20 l/min (max)
Control temperature	100 - 500 C (212 - 930 F) (Use A1130)
External dimensions	160 (W) × 145 (H) × 230 (D) mm. (6.3 × 5.7 × 9.0 in.)
Weight	4 kg. (8.82 lb.)

#### ● Handpiece

Power consumption	100V - 280W 110V - 330W 120V - 400W 220V - 540W 230V - 600W 240V - 650W
Total length (w/o cord)	185 (L) mm / 7.3 (L) in.
Weight (w/o cord)	115 g / 0.25 lb.

\*This product is protected against electrostatic discharge.  
\*Specifications and design are subject to change without notice.

#### ■ Electrostatic Protection

This product includes such features as electrically conductive plastic parts and grounding of the handpiece and station as measures to protect the device to be soldered from the effects of static electricity. Be sure to observe the following instructions:

- The handle and other plastic parts are not insulators, they are conductors. When replacing parts or repairing, take sufficient care not to expose live electrical parts or damage insulation materials.
- Be sure to ground the unit during use.

#### 中國RoHS: 產品中有毒有害物質或元素的名稱及含量

部件名稱	有毒有害物質或元素					
	鉛(Pb)	汞(Hg)	鎘(Cd)	六價鉻(Cr(VI))	多溴聯苯(PBBs)	多溴二苯醚(PBDE)
插頭	×	○	○	○	○	○
排氣噴嘴	×	○	○	○	○	○
電路板	×	○	○	○	○	○

○ : 表示該有毒有害物質在該部件所有均質材料中的含量均在SJ/T 11363-2006 標準規定的限量要求以下。  
× : 表示該有毒有害物質在該部件的某一均質材料中的含量 超出 SJ/T 11363-2006 標準規定的限量要求。

### 3. SAFETY INSTRUCTIONS

#### ⚠ WARNING

Warnings, cautions and notes are placed at critical points in this manual to direct the operator's attention to significant items. They are defined as follows:

- ⚠ **WARNING:** Failure to comply with a WARNING may result in serious injury or death.
- ⚠ **CAUTION:** Failure to comply with a CAUTION may result in injury to the operator, or damage to the items involved. Two examples are given below.

● Be sure to comply with the following WARNINGS and CAUTIONS for your safety.

#### ⚠ WARNING

- Be sure not to operate the unit with any combination of temperature and air flow settings that makes the thermal protector trip (the heater lamp turns off during use). This could damage the unit.
- After use, do not turn off the power switch and do not disconnect the plug during the automatic cool-down process.

#### ⚠ CAUTION

- When the power is ON, the temperature of the hot air and the nozzle ranges from 100 to 500 C (200 to 930 F). To avoid injury or damage to personal and items in the work area, observe the following:
- Do not direct the hot air toward personnel or touch the metal parts near the nozzle.
  - Do not use the product near combustible gases or flammable materials.
  - Inform others in the area that the unit is hot and should not be touched.
  - Turn the power off when not in use, or left unattended.
  - Turn the power off when changing parts or storing the HAKKO FR-801.
  - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - Children should be supervised to ensure that they do not play with the appliance.


To prevent accidents or damage to the HAKKO FR-801, be sure to observe the following:

- Do not strike the handpiece against hard surfaces or otherwise subject it to physical shock. This will damage the quartz glass shield around the heating element, and could damage the heater as well.
- Be sure the unit is grounded. Always connect power to a grounded receptacle.
- Do not disassemble the pump.
- Do not modify the unit.
- Use only genuine HAKKO replacement parts.
- Do not wet the unit or use the unit with wet hands.
- Remove power cord by holding the plug - not the wires.
- Make sure the work area is well ventilated.
- The HAKKO FR-801 is not intended for use by children or infirm persons without supervision.
- Children should be supervised to ensure that they do not play with the HAKKO FR-801.

### 4. INITIAL SETUP


#### A. Station assembly

- **Attach the handpiece holder.**  
Remove the handpiece holder mounting screw from the side of the station. Attach the handpiece holder to the station. (Figure 1)  
(The handpiece holder can be installed on either the left or right side.)

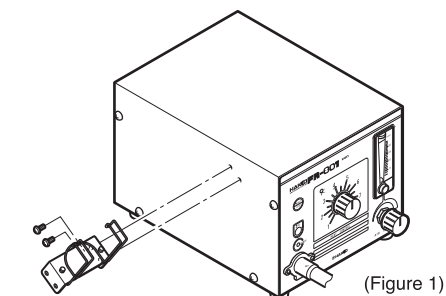


#### B. Handpiece assembly

- **Attach the nozzle.**  
Loosen the nozzle mounting screw. Attach the nozzle as shown in the drawing. (Figure 2)

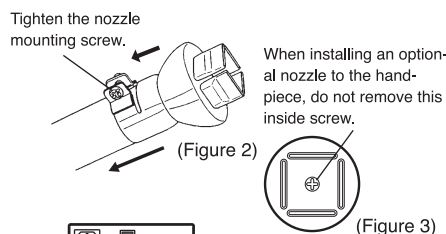


#### C. Electrical connection and power ON

- Connect the power cord to the power receptacle on the back panel of the station. (Figure 4)
- Place the handpiece on the holder. (Figure 5)
- Plug the power cord into a grounded wall socket.
- Turn the power switch ON.  
The power lamp will light on.
- Press down the ⏻ (START/STOP) button. The blowing function will start and the heating element will begin to warm up.

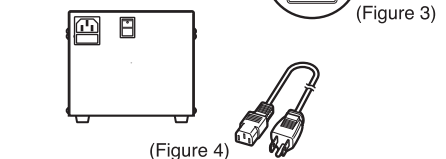


⚠ **CAUTION**  
This product is protected against electrostatic discharge. Be sure to use a grounded wall socket.

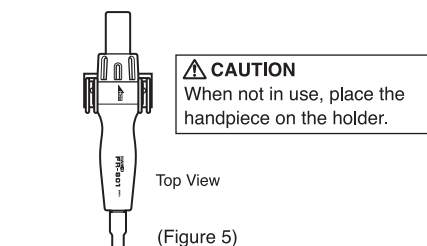

### 5. OPERATION

#### ● QFP Desoldering


- Adjust the air flow and temperature control knobs.**  
Adjust the flow rate of the hot air while watching the center of the ball. Wait for the temperature to stabilize for a short period of time.

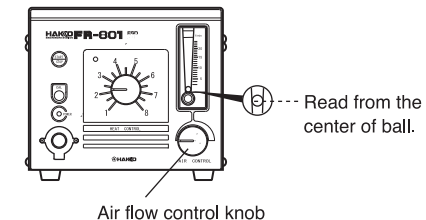

⚠ **WARNING**  
If the thermal protector is tripped, reduce the temperature setting or increase the air flow. Be sure not to operate the unit with temperature and air flow settings that makes the thermal protector trip. This could damage the unit.

#### 2. Place the FP pick-up under the IC lead.

- Slip the FP pick-up wire under the IC lead. (Figure 1)  
If the width of the IC does not match the size of the FP pick-up, adjust the width of the pick-up by squeezing the wire. In case of PLCC or small components such as chip resistors, desolder by using tweezers, etc.

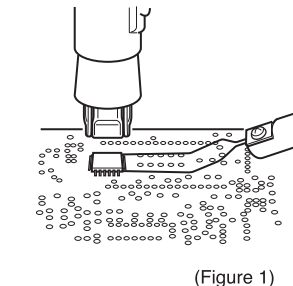


#### 3. Heating

- Hold the handpiece so that the nozzle is located directly over, but not touching the IC, and allow the hot air to melt the solder. Be careful not to touch the leads of the IC with the nozzle.

#### 4. Remove the IC.

- Once the solder has melted, remove the IC by lifting the FP pick-up. (Figure 2)

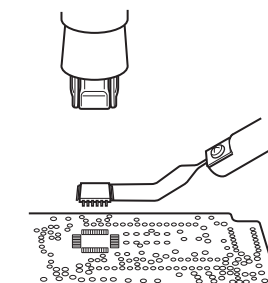

#### 5. Remove any remaining solder.

- After removing the IC, remove remaining solder with a soldering iron and wick or desoldering tool.

#### ● QFP Soldering

##### 1. Apply the solder paste.

- Apply the proper quality of solder paste and install the SMD on the PWB.

##### 2. Preheat the SMD.

- Refer to the figure 3 to preheat SMD.

##### 3. Soldering

- Heat the lead frame evenly. (Figure 4)

##### 4. Cleaning

- When soldering is completed, clean the residual flux from the board with an appropriate cleaner.

⚠ **CAUTION**  
Soldering with hot air has many advantages, such as the inherent ability to pre-heat the component being replaced. As with any soldering process, however, there is always the possibility of forming solder balls, bridges between leads, and inadequate solder joints. Always inspect the finished solder joints for structural and electrical integrity.

##### ● Press down the ⏻ (START/STOP) button.

- After the ⏻ (START/STOP) button is pressed down, an automatic blowing function begins sending cool air through the pipe in order to cool the handpiece. Do not disconnect the plug during this cooling process.


⚠ **CAUTION**  
During the cooling process, the amount of air is controlled by the setting of the air flow adjustment knob. HAKKO recommends setting the knob at maximum when cooling for greatest efficiency.

##### ● Turn the power switch off.

- After the blowing function finished, turn off the power switch.

##### ● Turn the power switch off.

- HAKKO FR-801 has CAL (calibration) volume to have fine adjustment for the calorific value of heater except the temperature control knob.

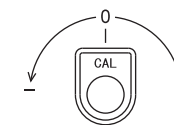

- i Use a small plus screwdriver to adjust the screw marked CAL at the front panel.  
Turn the screw clockwise to increase the temperature and counterclockwise to reduce the temperature.

**NOTE:**  
HAKKO FR-801 comes from the factory with zero (0) value preset.

## 6. MAINTENANCE / INSPECTION

### ● Broken heating element

#### ⚠ CAUTION

Replacing the heating element is very dangerous. Be sure to turn the power switch OFF and be careful of the following procedure when replacing the heating element.

#### A. Open the handpiece

1. Move the tube away from the handpiece, as shown. (Figure 1)
2. Remove the three screws holding the handpiece together.
3. Open the handpiece. Disconnect the grounding wire sleeve (1) and pipe from the protruding portion of the handle. Remove the pipe.

#### ⚠ CAUTION

Quartz glass and heat insulation are inside the pipe. Be careful not to drop or lose these items.

4. Disconnect the connector (2) and remove the heating element.

#### B. Measure the resistance value


Connect an ohmmeter across the connector terminals (a). The correct values are approximately: 26-40Ω (100-120V), 70-100Ω (220-240V). If the resistance value is incorrect, replace the part. (Refer to the instructions included with the replacement part.)

#### ⚠ CAUTION

Handle the heating element with care. Never rub the heating element wire! Insert the handle's projection into the hole in the pipe.

#### ● Replacing the fuse


1. Unplug the power cord from the power receptacle.
2. Remove the fuse holder.
3. Replace the fuse.  
5A (100-120V), 3.15A (220-240V)
4. Put the fuse holder back in place.

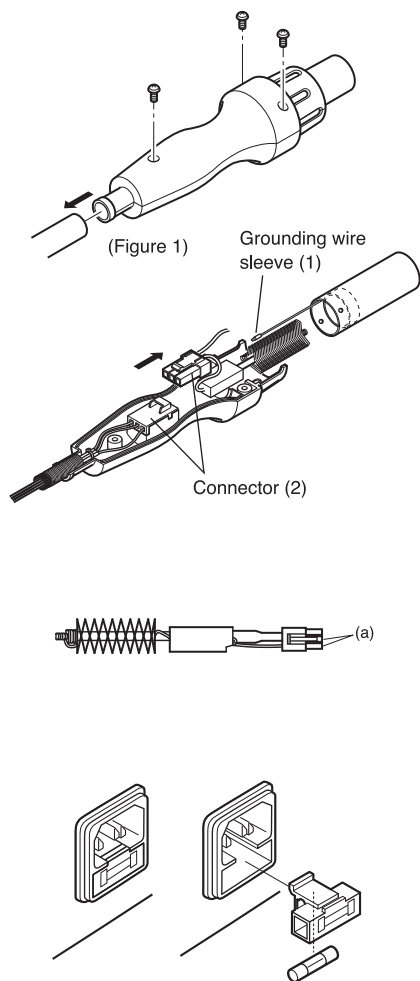

## 7. OPTIONAL NOZZLES

#### ⚠ CAUTION

The size in Name/Specification indicates the size of IC package.

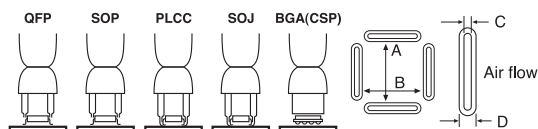

Unit: mm

Part No.	Specifications	Part No.	Specifications	Part No.	Specifications	Part No.	Specifications	Part No.	Specifications	
A1124B	Single ø2.5 (0.09)	A1125B	QFP 10 x 10 (0.39 x 0.39)	A1126B	QFP 14 x 14 (0.55 x 0.55)	C0.8	C1.0 (0.04)	C0.8 (0.03)		
	ø2.5 (I.D.) (0.09)		A:10.2 (0.4) B:10.2 (0.4)		A:15.2 (0.6) B:15.2 (0.6)	No.	D2.0 (0.08)	D2.0 (0.08)		
						A1125B-A1129B	A1191	A1192		
						A1131-A1141B				
						A1180B-A1189				
						A1203B-A1265BB				
A1127B	QFP 17.5 x 17.5 (0.68 x 0.68)	A1128B	QFP 14 x 20 (0.55 x 0.78)	A1129B	QFP 28 x 28 (1.1 x 1.1)	A1130	Single ø4.4 (0.17)	A1131	SOP 4.4 x 10 (0.17 x 0.39)	
	A:19.2 (0.76) B:19.2 (0.76)		A:15.2 (0.6) B:21.2 (0.83)		A:29.7 (1.17) B:29.7 (1.17)		ø4.4 (I.D.) (0.17)		4.8 (0.19)	
A1132	SOP 5.6 x 13 (0.22 x 0.51)	A1133	SOP 7.5 x 15 (0.3 x 0.59)	A1134	SOP 7.5 x 18 (0.3 x 0.7)	A1135B	PLCC 17.5 x 17.5 (0.68 x 0.68) (44 Pins)	A1136B	PLCC 20 x 20 (0.78 x 0.78) (52 Pins)	
	5.7 (0.22)		7.2 (0.28)		7.2 (0.28)		A:18.5 (0.73) B:18.5 (0.73)		A:21 (0.83) B:21 (0.83)	
A1137B	PLCC 25 x 25 (0.98 x 0.98) (68 Pins)	A1138B	PLCC 30 x 30 (1.18 x 1.18) (84 Pins)	A1139B	PLCC 12.5 x 7.3 (0.49 x 0.29) (18 Pins)	A1140B	PLCC 11.5 x 11.5 (0.45 x 0.45) (28 Pins)	A1141B	PLCC 11.5 x 14 (0.45 x 0.55) (32 Pins)	
	A:26 (1.02) B:26 (1.02)		A:31 (1.22) B:31 (1.22)		A: 9 (0.35) B:14 (0.55)		A:13 (0.51) B:13 (0.51)		A:15 (0.59) B:13 (0.51)	
A1142B	Bent Single 1.5 x 3 (0.06 x 0.12)	A1180B	BQFP 17 x 17 (0.67 x 0.67)	A1181B	BQFP 19 x 19 (0.75 x 0.75)	A1182B	BQFP 24 x 24 (0.94 x 0.94)	A1183	SOJ 15 x 8 (0.59 x 0.31)	
	45°		A:18.2 (0.72) B:18.2 (0.72)		A:19.2 (0.76) B:19.2 (0.76)		A:24.2 (0.95) B:24.2 (0.95)		8 (0.31)	


## 7. OPTIONAL NOZZLES

A1184B	SOJ 18 x 8 (0.71 x 0.31)	A1185B	TSOL 13 x 10 (0.51 x 0.39)	A1186B	TSOL 18 x 10 (0.71 x 0.39)	A1187B	TSOL 18.5 x 8 (0.73 x 0.31)	A1188B	PLCC 9 x 9 (0.35 x 0.35) (20 Pins)
	10 (0.39)		11.9 (0.47)		18.2 (0.72)		18.5 (0.73)	A:11 (0.43) B:11 (0.43)	
A1189B	PLCC 34 x 34 (1.34 x 1.34) (100 Pins)	A1190	Dual Single 2.5 x 9.5 Pitch (0.09 x 0.37)	A1191	SIP 25L (0.98)	A1192	SIP 50L (1.97)		
	A:36.5 (1.44) B:36.5 (1.44)		ø2.5 (I.D.) (0.09)		26 (1.02)		52.5 (2.07)		
A1203B	QFP 35 x 35 (1.38 x 1.38)	A1214B	SOJ 10 x 26 (0.39 x 1.02)	A1215B	QFP 42.5 x 42.5 (1.67 x 1.67)	A1257B	SOP 11 x 21 (0.43 x 0.83)	A1258B	SOP 7.6 x 12.7 (0.3 x 0.5)
	A:35.2 (1.39) B:35.2 (1.39)		12 (0.47)		A:42.5 (1.67) B:42.5 (1.67)		11.7 (0.46)		8.2 (0.32)
A1259B	SOP 13 x 28 (0.51 x 1.1)	A1260B	SOP 8.6 x 18 (0.34 x 0.71)	A1261B	QFP 20 x 20 (0.78 x 0.78)	A1262B	QFP 12 x 12 (0.47 x 0.47)	A1263B	QFP 28 x 40 (1.1 x 1.57)
	13.5 (0.53)		8.7 (0.34)		A:20.2 (0.8) B:20.2 (0.8)		A:12.2 (0.48) B:12.2 (0.48)		A:27.7 (1.09) B:39.7 (1.56)
A1264B	QFP 40 x 40 (1.57 x 1.57)	A1265B	QFP 32 x 32 (1.26 x 1.26)	A1325	Dual Single ø1.5 x 5-10 (0.06 x 0.2-0.39) Adjustable Pitch				
	A:40.2 (1.58) B:40.2 (1.58)		A:32.2 (1.27) B:32.2 (1.27)		The pitch between the two nozzles is adjustable.		5 (0.2)	10 (0.39)	ø1.5 (I.D.) (0.06)
A1470	BGA 8 x 8	A1471	BGA 12 x 12	A1472	BGA 13 x 13	A1473	BGA 15 x 15	A1474	BGA 18 x 18
	9 (0.35)		13 (0.51)		14 (0.55)		16 (0.63)		19 (0.75)
A1475	BGA 27 x 27	A1476	BGA 35 x 35	A1477	BGA 38 x 38	A1478	BGA 40 x 40		
	28 (1.10)		36 (1.42)		39 (1.54)		41 (1.61)		

## 8. PARTS LIST / HANDPIECE

#### NOTE:

Spare or repair parts do not include mounting screws, if they are not listed on the specifications. Screws must be ordered separately.

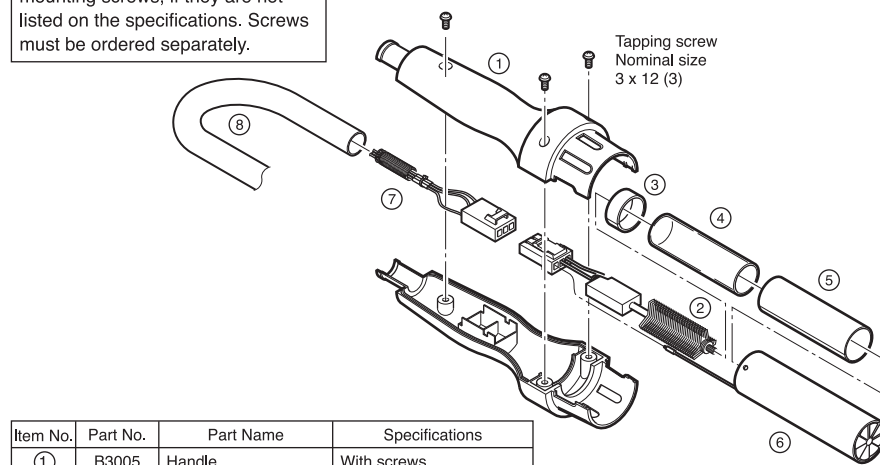


Item No.	Part No.	Part Name	Specifications
①	B3005	Handle	With screws
②	A1521	Heating element	100 - 110V
	A1522	Heating element	220 - 240V
	A1558	Heating element	120V
③	B3009	Mica pipe B	
④	B2995	Quartz glass pipe	For support heating element
⑤	B3008	Mica pipe A	
⑥	B3004	Pipe	
⑦	B3007	Cord assembly	With silicone tube
⑧	B1188	Silicone hose	

## 8. PARTS LIST / STATION

#### NOTE:

Spare or repair parts do not include mounting screws, if they are not listed on the specifications. Screws must be ordered separately.

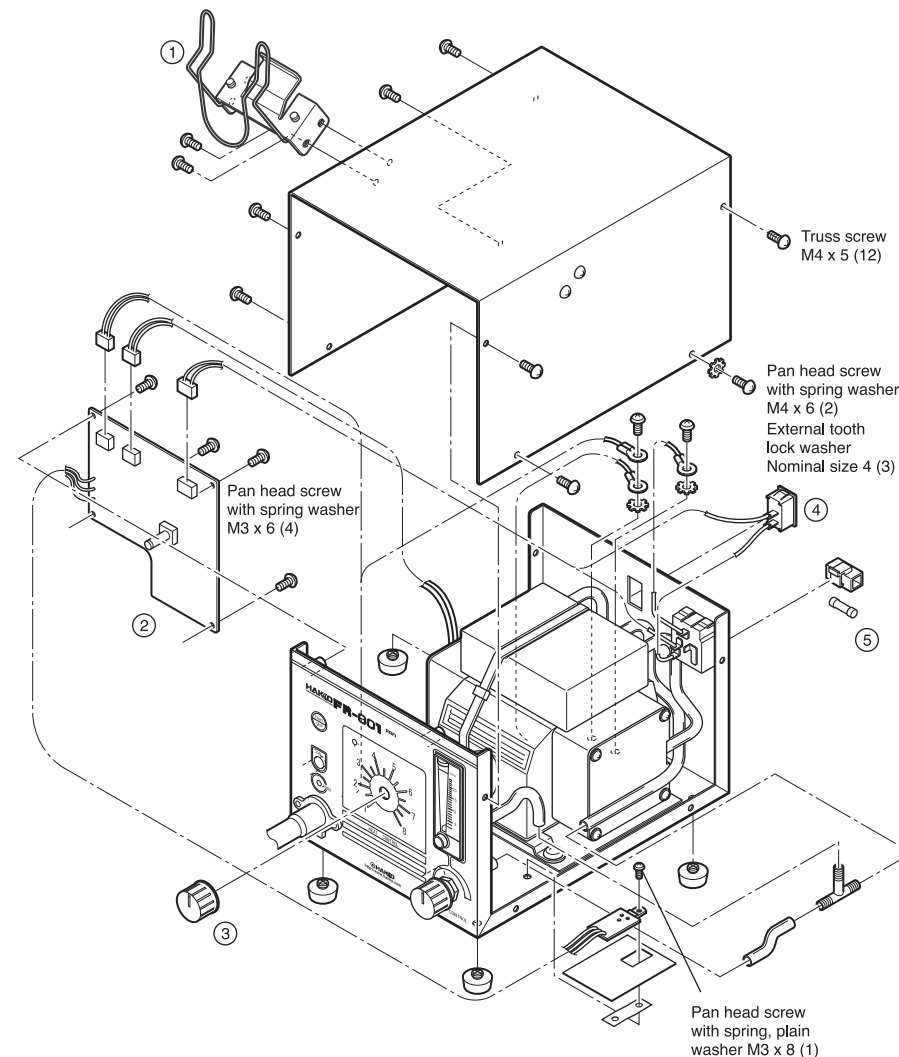

Item No.	Part No.	Part Name	Specifications
①	B3442	Handpiece holder	
②	B3391	P.W.B.	100V, with potentiometer, triac
	B3392	P.W.B.	110V, with potentiometer, triac
	B3393	P.W.B.	120V, with potentiometer, triac
	B3394	P.W.B.	220V, with potentiometer, triac
	B3395	P.W.B.	230-240V, with potentiometer, triac
③	B1028	Knob	With screw
④	B1084	Power switch	
⑤	B2468	Fuse/125V-5A	100~120V
	B1258	Fuse/250V-3.15A(S)	220~240V
⑥	B2419	Power cord, 3 wired cord & American plug	U.S.A.
	B2421	Power cord, 3 wired cord but no plug	
	B2422	Power cord, 3 wired cord & BS plug	India
	B2424	Power cord, 3 wired cord & European plug	220V KTL, 230V CE
	B2425	Power cord, 3 wired cord & BS plug	230V CE U.K.
	B2426	Power cord, 3 wired cord & Australian plug	
	B2436	Power cord, 3 wired cord & Chinese plug	China
	B3508	Power cord, 3 wired cord & American plug	

#### ● Optional Parts

Item No.	Part No.	Part Name	Specifications
①	B1438	FP pick-up	With 1pc. of pick-up wire (S) & (L)
②	B1439	FP pick-up wire (S)	
③	B1440	FP pick-up wire (L)	

\* 各言語 (日本語、英語、中国語、フランス語、ドイツ語、韓国語) の取扱説明書は以下のURL、HAKKO Document Portalからダウンロードしてご覧いただけます。  
(商品によっては設定の無い言語がありますが、ご了承ください)  
\* 各言語 (日本語、英語、中文、法語、ドイツ語、韓国語) の取扱説明書は以下のURL、HAKKO Document Portal 下欄参照。  
(有一部分の產品沒有設定外語對應, 請見諒)  
\* Instruction manual for the language, Japanese, English, Chinese, French, German and Korean can be downloaded from the following URL, HAKKO Document Portal.  
(Please note that some language may not be available depending on the product.)

<https://doc.hakko.com>